


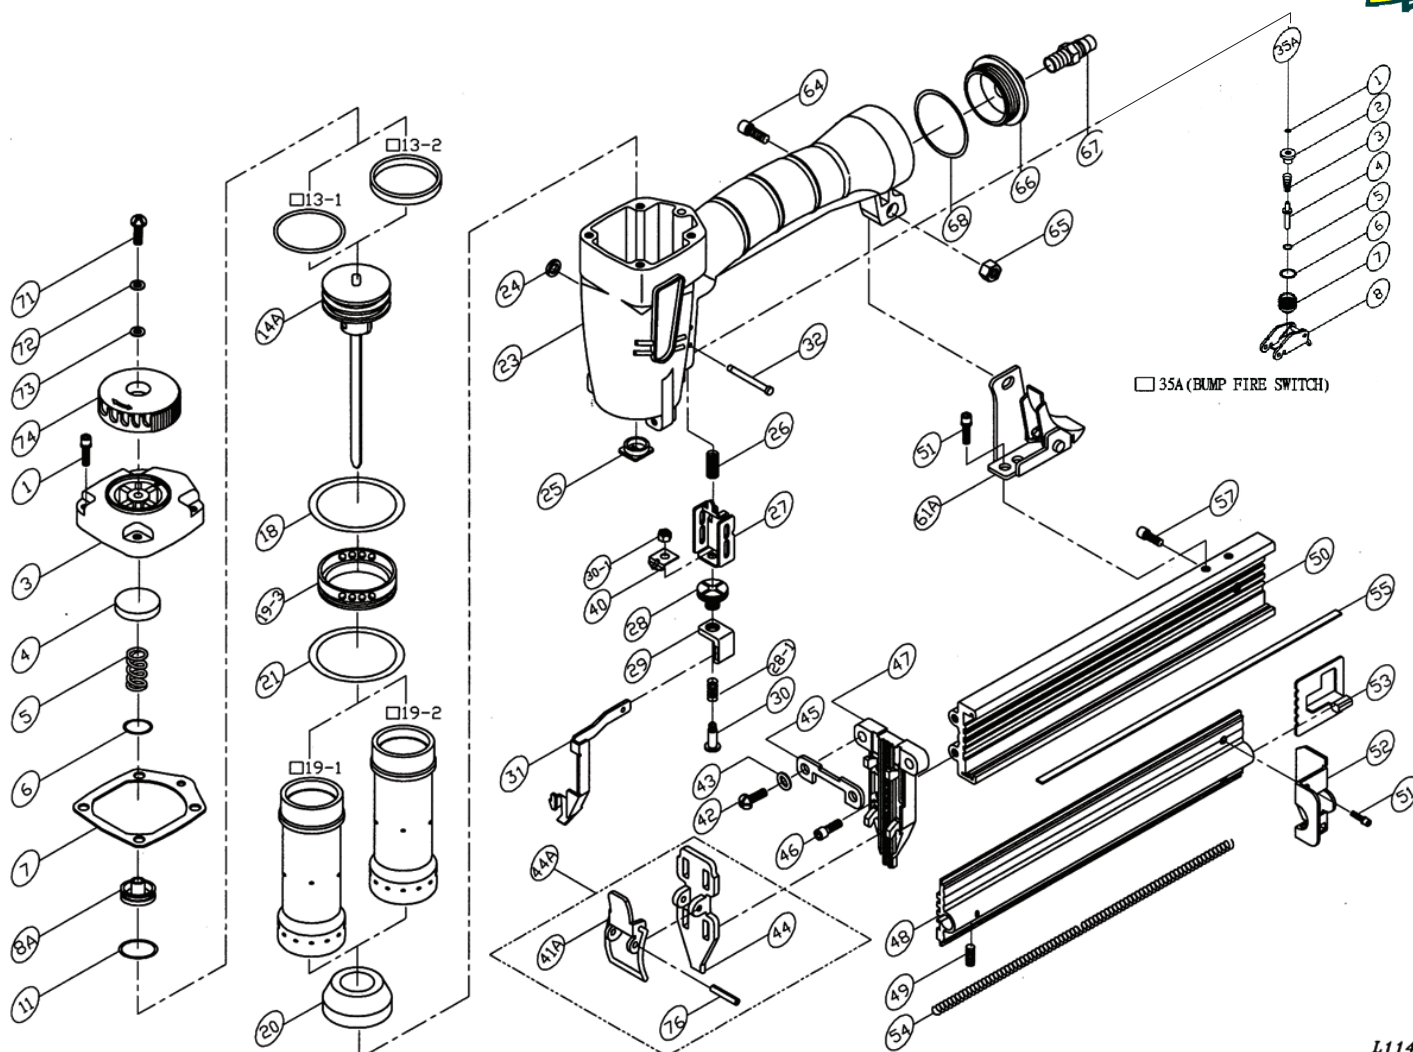

L1141

pos.	referencia	descripcion	ref fabrica	pos.	referencia	descripcion	ref fabrica
1	R020401	TORNILLO	HS0516BW	47	R020431	GUIA LENGUETA	11504702
3	R020402	CIERRE CABEZA	11100302	48	R020432	TAPA CARGADOR	11504801
4	R020403	RETEN	12100401	49	R020433	TORNILLO	SS0412S
5	R020404	MUELLE	12100501	50	R020434	CARGADOR	11505001
6	R020405	JUNTA	OR1425R	51	R020435	TORNILLO	HS0408BW
7	R020406	JUNTA PLASTICA	11100701	52	R020436	TOPE CARGADOR	11005201
8A	R020407	VALVULA	12100801A	53	R020437	EMPUJADOR	11505301
11	R020408	JUNTA	OR3224R	54	R020438	MUELLE	12105401
13-1	R020409	JUNTA	OR1830R	55	R020439	GUIA CLAVOS	12105501
4A-2	R020410	PISTON REF.LMF32AC	11501402A	57	R020440	TORNILLO	HS0507B
18	R020411	JUNTA	OR4630R	61A	R020441	BASE BARZO	12106101A
19-1	R020412	CILINDRO	11401901	64	R020442	TORNILLO3	HS0516B
19-3	R020414	COLLAR	11101903	65	R020443	TUERCA	LN0500N
20	R020415	BUMPER	11502001	66	R020444	TAPA TRASERA	11106601
21	R020416	JUNTA	OR3018R	68	R020446	JUNTA	OR4030R
23	R020417	CUERPO	11102309	71	R020447	TORNILLO	US0506B
24	R020418	JUNTA	OR1919H	72	R020448	ARANDELA	FW0512W
25	R020419	CIERRE PUNTA	12102501	73	R020449	RETEN	12103301
26	R020420	MUELLE	11002601	74	R020450	TAPA DIFUSORA	13907403
27	R020421	GUIA SEGURO	11002702	76	R020451	PASADOR	RP3020S
31	R020422	SEGURO	11003101	35-A1	R020452	JUNTA	OR0319R
32	R020423	PASADOR	11103201	35A-2	R020453	VALVULA SUPERIOR DISP	11003401
41A	R020424	PALANCA CIERRE	27204101A	35A-3	R020454	MUELLE	11006901
42	R020425	TORNILLO	US0525B	35A-4	R020455	VASTAGO DISPARADOR	11003503
43	R020426	ARANDELA	SW0500W	35A-5	R020456	JUNTA	OR2515H
44A	R020427	CONJUNTO PLACA CIERRE	11504402A	35A-6	R020457	JUNTA	OR1119R
44	R020428	PLACA CIERRE	11504401	35A-7	R020458	CIERRE DISPARADOR	11003803
45	R020429	PLACA A	12104501	35A-8	R020459	GATILLO	15104501A
46	R020430	TORNILLO	HS0412B				